

ATP34 2 piece mount Instructions

It is important that these instructions are followed in order for this product to function correctly.

- 1) Easyfit recoil pin included.
- 2) Fit mounts and scope to rifle in usual way and check adjuster locking screws (A) are securely tightened.
- 3) Shoot a five shot group at approximately 25 yards. Measure vertical distance from aiming point.
- 4) To correct elevation loosen locking screws (A) on front and rear mount using 2.5mm allen key. Turn adjuster screw (B) clockwise to lift rear of scope using 2mm allen key ($\frac{1}{4}$ turn = approx 22mm at 25 yards). Retighten locking screws (A) **FIRMLY**. To lower rear of scope undo locking screws (A), push down on top of rear mount and turn adjuster screw (B) anti-clockwise as required. Retighten locking screws **FIRMLY**.

NOTE: Both front and rear mount adjusters can be used to lift scope evenly if required.
Maximum adjustment is 2 turns which = 1.3mm of full adjustment.

