 
# LASER SIGHT (R.G) USER MANUAL


#### **DISCRIPTION:**

  
This laser sights integrated with optics and electronics provide a wide field of view. They are very suitable for fast aiming and shooting at stationary and moving objects

### SPECIFICATION:

Length	Wavelength	Height	Wattage	Weight	Reaching distance	battery	Voltage
120mm	532nm	36mm	5mw	144g	300m	CR123AW	3V







#### **OPERATION:**

- 1.Fix the laser sight to the on a weapon
- 2.Make the elevation and windage adjustment by twisting the 2 small screws in the head part with smaller allen wrench, turning it until the main laser spot overlap with the scattered points.
- 3.To change the batteries, unscrew and open the back cover of body, then install the batteries with positive pole. Finally, replace the back cover.
- 4. To operate the laser, press the switch.

## **SAFETY CAUTIONS:**

- 1 Never look directly into the laser beam.
- 2. Never point a laser beam at a person.
- 3. Do not aim the laser at reflective surfaces.
- 4. Never view a laser pointer using an optical instrument, such as binocular or a microscope.
- 5. Do not allow children to use laser pointers unless under the supervision of an adult.