



INSTRUCTIONS

FOCUSING

While holding the scope about three or four inches from your eye, quickly glance through the eyepiece at a featureless, flatly lit bright area such as a wall or open sky.

CAUTION: VIEWING THE SUN CAN CAUSE SERIOUS EYE INJURY. NEVER LOOK AT THE SUN WITH THIS PRODUCT OR EVEN THE NAKED EYE.

If the reticle is not sharply defined instantly, loosen the eye bell locking ring. Turn the eyepiece (either direction) a few turns. Quickly glance through the scope again. If the focus has improved, but is still not perfect, continue focusing. If the focus condition became worse, turn it the opposite way. When the reticle appears in sharp focus, retighten the locking ring.

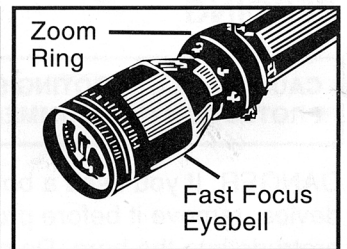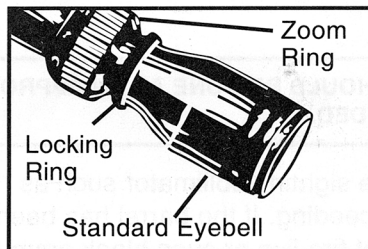

On models equipped with a fast focus eyebell, one only needs to turn the eyebell in or out for adjustment. There is no lock ring with which to be concerned.

MOUNTING

CAUTION: BE SURE GUN IS NOT LOADED. USE SAFE GUN HANDLING PROCEDURES AT ALL TIMES.

Separate the tops of the rings from the bottom portion. Set the scope in the cradles formed by the bottom portions. Replace the tops, but don't tighten.

Push the scope as far forward as it will go. Rotate the scope so that the elevation turret is on top.

Shoulder or bench rest the rifle and pull the scope back forward you until you see the full field of view. Check altitude of the reticle. The vertical and horizontal components should be aligned with the bore axis.

When the scope is properly positioned and the reticle aligned with the bore axis, tighten the ring tops.


CAUTION: Do not over-tighten. Over-tightening can cause damage to the scope, affecting performance or even rendering it inoperable. There should be a slight gap between the rings and the scope. The gaps should be even on the left and right side of both rings.

PRE-ZEROING

CAUTION: BE SURE GUN IS NOT LOADED. USE SAFE GUN HANDLING PROCEDURES AT ALL TIMES.

To bore sight, remove the bolt from bolt action guns, open other types. If you have a parallax correctable model riflescope, (see parallax corrections), rotate the parallax ring to the 50 yard position. Set zoom scopes to mid power.

Rest the rifle on a steady support and remove the windage and elevation caps. Look through the bore, from the breech, (for actions other than bolt, you will need a small mirror positioned in the ejection port and tilted so you can see through the bore), at a 50-yard target. Move the butt stock to center the target in the bore.

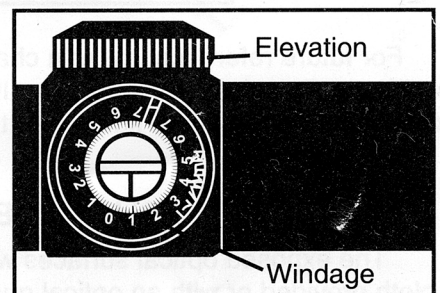

Without disturbing the rifle, adjust windage and elevation screws to center the reticle on target.

To raise the point of impact, turn the elevation screw counterclockwise. To shift left, turn windage screw clockwise.