


ENG

Installation of the mounts


Weaver, Prism 14/200, Los, MAK adapter:

- The mounting holes in the base of the riflescope enable the mount to be installed in one of the multiple positions. The choice of the mounting position helps the user to ensure the correct eye relief depending on the rifle type.
- Attach the mount to the base of the riflescope using a hex-nut wrench and screws (see pic. 1).
- Install the scope on the rifle and check if the position is suitable for you. Remove the scope.
- Unscrew the screws one by one, apply some thread sealant (Loctite 638 for example) onto the thread of the screws and tighten them fully (do not overtighten). Let the sealant dry for a while.

The riflescope is ready to be installed on a rifle and to be zeroed.

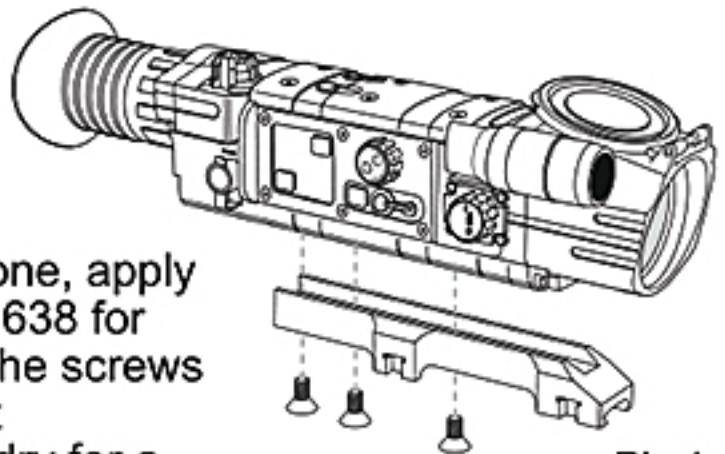

Pic.1

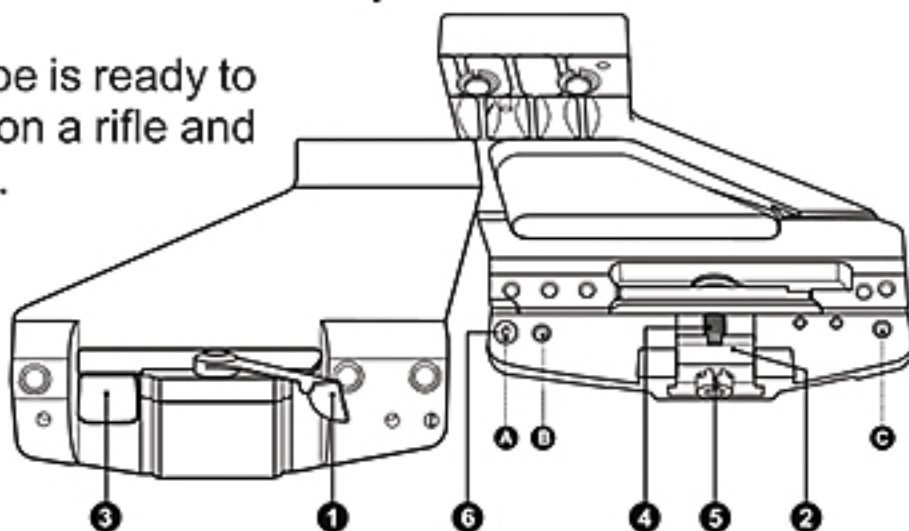

Pic.2