

# ELIMINATOR III®

## Front Mounting Plate Instructions


If you are using a tapered base, or are having difficulty sighting-in at 100 yards because of a lack of DOWN elevation adjustment, this Front Mounting Plate will put you on target.

For your convenience, three plate sizes are included:

- A) Approx. 10 MOA adjustment down
- B) Approx. 20 MOA adjustment down
- C) Approx. 30 MOA adjustment down

– Typical Mounting Situation –

Use the Front Mounting Plate as shown below:

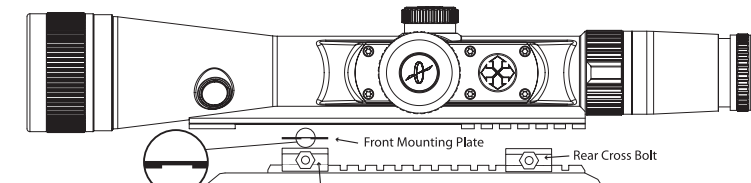

Note: Grooved slot of plate must be on the bottom



Front Cross Bolt  
assembly with Plate

Rear Cross Bolt  
assembly

## Installation of Front Mounting Plate

Place the cross bolts where needed for mounting scope with correct eye relief. Be sure the slot of the plate lies over the Front Cross Bolt. Rock the scope into place.



Be sure the side clamps engage the rails and finger tighten the nuts. Push the scope forward until there is firm metal contact on the Rear Cross Bolt. Firmly tighten both hex nuts to 50 to 70 inch/pounds.



331 East 8th Street, Greeley, CO 80631  
970-356-1670

Item #62505  
INSTR-5052